

Steering Wheel **Removal**;

- 1). Remove centre cap by pressing both tabs located on back of steering wheel.
- 2). Loosen locking nut with a wrench and remove it completely from the threaded steering rod.
- 3). Lift the steering wheel from the steering column and discard steering wheel, cap and locking nut.



Steering Wheel **Installation**;

- 1). Affix the replacement steering wheel over the threaded steering column.
- 2). Insert steering rod through the flat washer located in the centre of the steering wheel.
- 3). Tighten the new locking nut fully onto the steering column with a wrench and check to make sure it is secure. Insert new centre cap and test steering wheel before using.

